



chillmax

Bar Fridge Manual

INSTRUCTION MANUAL

CONTENTS

SAFETY PRECAUTIONS	1-3
HOW TO USE	4-5
CLEANING	5
IN CASE OF THE FOLLOWING	6
BEFORE REQUESTING SERVICE	7



SAA Approval No.: GJW2012-1910

Please read these instructions completely before operating the units



Congratulations on your purchase of a Chillmax

Before turning on the fridge, please let it settle for 2 hours after you have moved into position.

There are some important factors to consider when purchasing a bar fridge for your entertaining area, be it indoors or outdoors. This information leaflet will help to answer some of those questions and assist with making the decision of location and installation a little easier.

Starting Up:

All fridges should not be turned on for a minimum of 2 hours after relocation, transport or movement. Oil in the compressor will be relocated to the walls of narrow ducts and needs to find it's way back before operation. Failure to let a fridge 'settle' can result in compressor failure and an expensive repair which is not covered under warranty.

Stocking/Filling your fridge:

The fridge will run more efficiently when it is FULL of product. These are large commercial fridges. This is because the fridge has to only chill about 25% of the air volume of what it would normally chill if empty. When first starting a new fridge, it's best to load it up with drinks and let it run for 24 hours. This effectively runs it in and will settle into its normal operation.

The thermostat control in most commercial fridges has a variance of 3- 5oc, this means that if you set it for 2oc, it will turn off at 2oc, but will need to get to 5-7oc before it starts up again. As the Chillmax fridges have an electronic display and you see 7oc, don't panic, it's perfectly normal as the temperature probe is measuring the air temperature, and not the temperature of your drinks. Without being too scientific, the air temp may get to 7, but the drinks will only have raised 1-2oc from when the fridge turned off, so they will only need to a little while and they will be back to 2oc again.

Ventilation, the fridges require minimal ventilation, however they do vent from the back, therefore a space of at least 20mm is required to the sides and top of the unit (40mm at the rear). The units require air to circulate so that when warm air is vented from the rear, it can easily rise and clear rather than being recirculated back in to the cool air inlet. Failure to provide adequate ventilation will make a fridge work harder, lower its life expectancy and increase your energy consumption.

If you plan to build in, please observe the minimum clearances and do not fit a trim panel to the top, this will prevent heat dissipation.



Can I use the fridge outside in my outdoor entertaining area?

Yes, fridges are fine to be located outside, but there are many variables that will affect the performance of the fridge. Direct Sunlight will impede fridge performance, it is recommended that the unit be in a covered area and in no way in contact with sunlight or other variables that will heat up the area in which the fridge is located.

Glass door fridges work harder than a normal domestic fridge, especially when your desired temperature is quite low for beer chilling, approx 2 degrees. Exposure or contact with sun, rain, water, sea salt air or heat sources should be avoided at all times. Fridges located inside will generally perform more efficiently due to the average lower temperature

For outdoor units on days of prolonged extreme heat ie 35oC or greater, you should consider your use, ensure the unit has adequate ventilation, or turning off.

Ambient Temperature, this is the actual temperature of the outside air in the area the fridge is located. All units are tested between 32oc > and 43oc ambient, however this is just a test, and the units have to work extra hard in this environment. When ambient temperatures exceed 30oc it takes far longer for the units to get to the set temperature. If you're planning a party on a hot day, we'd recommend filling the fridge the night before with as many cold ones as possible to help the fridge maintain the temperature during the hot day. Adding warm drinks on a hot day can take a long time to chill, especially when the doors are being opened and closed repeatedly by you and your guests. Condensation can and will occur on the doors, depending on the humidity levels in your area, it is normal and unavoidable in some areas and weather conditions.

Noise:

These are a commercial fridge, the DB rating is between 45-55dB, you will hear the compressor cut in and out as the fridges goes through the normal operation and it is not unusual for a compressor to turn on/off up to 10 times per hour, a normal domestic fridge may be around 35dB.

Caring for your fridge

Due Care and Maintenance should always be undertaken to prevent any deterioration to the cosmetic appearance of your unit, especially for units located outside and/or in near coastal areas. It is recommended to wipe down the unit with warm soapy water on a weekly basis. Stainless Steel models are 304 grade stainless, and are not "Rust Proof" please adhere to the care and maintenance instruction above.



chillmax

Service & Repairs:

In the rare or unfortunate event that you require help or service, please contact us directly. This item is sold with 12 month manufactures parts warranty, to the original purchaser.

Before calling for service, please read all instructions carefully, and ensure the item is correctly setup. When you call for service, we will require your assistance to "Trouble Shoot" the item, this may involve sending us photos and also requiring your help ruling out any other issues, before we can consider. Your cooperation and patience will help us resolve sooner.

Until the exact nature of any reported fault is determined, the solution Premierhouse can offer may vary. The warranty will be void if unauthorised inspection, service, modification or tampering has occurred.

Please Note:

Parts are free, service calls are not included, item can be returned to/from at buyers cost for free repair. If the unit is found to be Dead on Arrival, Premier House will at its discretion, repair or replace at no cost to the customer.

If the unit is returned as DOA, Premier House will check the unit, if it is not DOA as described, the unit cannot be refunded and freight costs apply.

Should you have further questions, please don't hesitate to contact us

sales@premierhouse.com.au

SAFETY PRECAUTIONS

- To ensure proper use, please thoroughly study these SAFETY PRECAUTIONS before operating the Unit.
- The purpose of the safety precautions in this manual is to ensure safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handling of the unit could lead to death or serious injury are listed under the "⚠️WARNING" heading. However, the cases listed under the "⚠️CAUTION" heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.

⚠️ WARNING Improper handling of the unit could lead to death or serious injury.

⚠️ CAUTION Improper handling of the unit could lead to serious results depending on the circumstances.

- Text set off by the exclamation mark **!** contains information that should be strictly adhered to.
- After reading the instruction manual, store it an easily accessible place where the user(s) of this product can easily find it.

◆ PRECAUTIONS FOR INSTALLATION

⚠️ WARNING



Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.


◆ PRECAUTIONS FOR USE

⚠️ WARNING




DONT TAMPER

All repairs, disassembly and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.

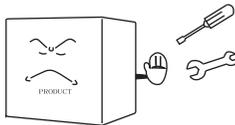


ELECTRICAL SHOCK HAZARDS

Never splash water directly onto the product or wash with water as short-circuit and electrical leakage could result.

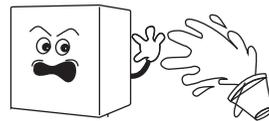


DANGER OF EXPLOSION

Never put flammable or volatile substances into the unit as explosion and fire could result.

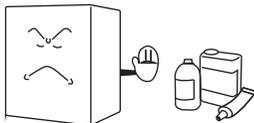


PROHIBITED

Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects the power cord or squeezing it in a tight place could damage it, possible resulting in electrical shock or fire.

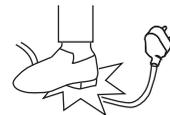


PROHIBITED

Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire.

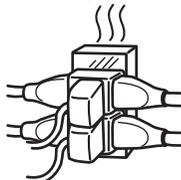

FLAMMABLE

Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.

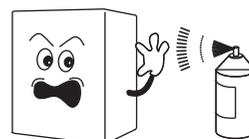


SAFETY PRECAUTIONS

⚠️ WARNING




The cooler is intended for storage and display of beer and beverages for sale. Do not use for other purpose than the intended as this could adversely affect items placed in the unit.

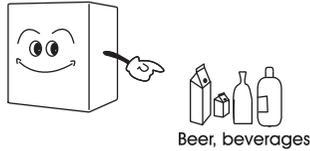


ROTATING DEVICE

Never attempt to insert fingers, sticks, etc. into the cold air suction outlet. A circulation fan is rotating at high speed inside the outlet. Injury, electrical shock and improper operation could result.

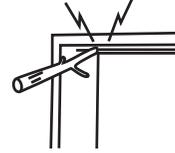


PROHIBITED

For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.

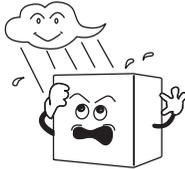


PROHIBITED

Never place heavy objects or items containing water on top of the unit. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.

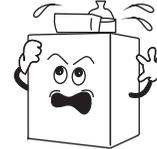


Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products could cause personal injury.

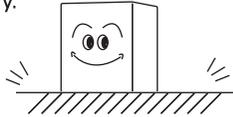


CAUTION AGAINST EXPLOSION

If you find gas leakage, please don't touch the chest freezer, and close gas and open the door for ventilation. Gas leakage cause explosion, fire, and fire injury.

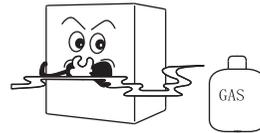


Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.

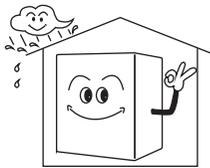

Away from hot air sources
Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.



Leave disassembly and disposal of the unit to qualified experts.

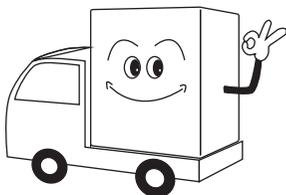


Should the unit need temporary storage, make sure not to store the unit in a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.

SAFETY PRECAUTIONS


⚠️ WARNING

WELL VENTILATED PLACE

Please make more than 10cm space between Chest freezer and wall. If there are no space, cooling capacity can drop down.

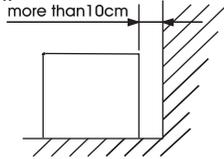


If installation in a damp location is unavoidable, also install an electrical leakage circuit breaker. If no electrical leakage circuit breaker is installed, electrical shock could result.

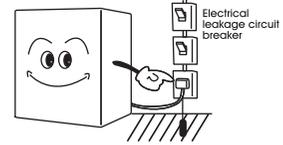


PROHIBITED

Never hang from the door or climb onto the unit. The unit could tip over or fall and cause material damage or injury.

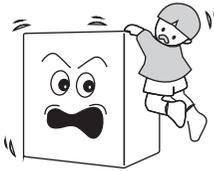


DISCONNECT POWER CORD PLUG FROM WALL OUTLET

Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire.

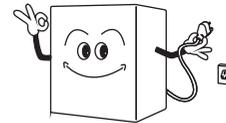

DON'T PINCH FINGERS

Grasp the handle when closing the door. Holding at other positions could result in pinched fingers and injury.

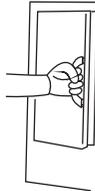


Do not touch


Do not push hand against or apply excessive force to glass surfaces as the glass could break and cause injury.



When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, possible resulting in overheating and fire.

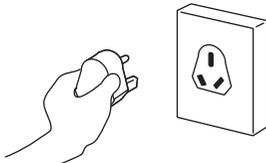

Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.

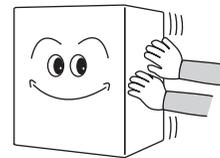


PROHIBITED

Do not throw items onto the shelves and do not place items totaling more than 30Kg on each shelf. The shelf could fall down, possibly cause injury.



Be sure attach and secure shelves correctly. An improperly attached shelf could fall down and cause injury.

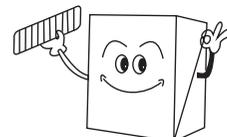

HOW TO USE

BEFORE USE

- Remove shipping package, tape, etc, and leave doors open ventilation for a while.
- The unit is cleaned before shipment. However, clean the compartment interior once after delivery.
- Please insert power supply plug into the wall outlet ,single-phase to cat voltage.
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler.

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

- Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.

TEMPERATURE ADJUSTMENT

- Thermostat was adjusted using temperature at factory. To adjust it, turn right could cause temperature in showcase down. To raise the temperature, turn it left. Excessive refrigeration will increase electricity consumption unnecessarily.

DRAIN TRAY

- Defrosting is performed automatically and drain water is collected in the drain tray.
- Water in the drain tray is evaporated automatically. In humidity, large amount of water in the drain tray, so please throw away drain water once a day.

EFFICIENT USE

Please follow the below instruction, you could save energy.

- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short a time as possible.
- Please install the unit in the place which is well-ventilated.

SHELF HEIGHT ADJUSTMENT

The shelf height can be adjusted.

Arrange the shelves in accordance with the dimensions of the items to be placed in the cooler.

HOW TO USE

PLACING ITEMS IN THE SHOWCASE

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

- Do not let items obstruct the cold air inlet and suction outlet.
- Place items so that they do not protrude from the shelves. The gap between the shelves and the door is used for circulation of cold air.
- Place items evenly on all shelves.

THERMOSTAT INSTRUCTION

Keys	Function
Set	Enter Temperature set mode by pressing for 3 seconds
	Use to adjust temperature UP in set mode, Use to turn light in or off when not In set mode
	Use to adjust temperature DOWN in set mode
	Use to exit Set Mode after setting temperature

Temperature Adjustment:

To adjust set temperature, please press “Set” for 3 seconds, display will show “ST”, press “Set” again, display will show current set temperature, Use the  (UP) button to increase temperature or the  (DOWN) button to decrease temperature, when you have finished press  (exit) to save and exit

LED Light:

To turn the light on or off, please press the  Button


 **Note: If a manual defrost is started this resets the automatic defrost timer. During defrost periods the Defrost light is illuminated.**



WARNING

WARNING: Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.

- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder, soap powder, benzine, oil or hot water as these will damage the painting and plastic components.

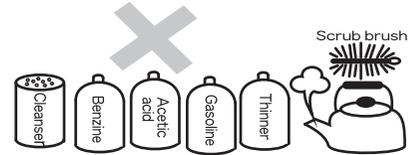

2 CHECKS

To ensure the safety, perform the following checks after cleaning.

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

IN CASE OF THE FOLLOWING

1 POWER FAILURE

Keep opening and closing of the door to a minimum.

Avoid placing new items in the cooler as this will raise the temperature inside the compartment.

2 WHEN NOT USED FOR A LONG PERIOD

Remove all items from the compartment and disconnect the power cord plug from the wall outlet.

Clean the compartment interior and wipe away all water.

To prevent mold formation and bad smell, leave the door open to dry the compartment completely.

3 TRANSPORTATION

Disconnect the power cord plug from the wall outlet.

When moving the cooler, make sure that the feet do not damage the power cord.

Do not let the feet hit against floor steps, thresholds, etc.

4 TEMPORARY STORAGE

Affix a piece of wood, etc. Between the door and main unit to prevent complete closing of the door.

Make sure not to store the unused cooler at a location where children play.

Should a child enter the compartment and the door is closed, the child may not be able to open the door from the inside.

INSTRUCTION MANUAL

BEFORE REQUESTING SERVICE

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet.

Transfer the items stored in the cooler to a box or other container. Then contact the dealer from whom you purchased this unit and be ready to provide information as listed in "REQUIRED INFORMATION" below.



CAUTION

To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

BEFORE REQUESTING SERVICE

No refrigeration at all	<ul style="list-style-type: none">● Is the power supply interrupted?● Is the power cord plug disconnected from the wall outlet?● Are the shop's power fuses blown and/or the circuit breaker activated?
Inadequate refrigeration	<ul style="list-style-type: none">● Is the temperature setting appropriate?● Are items obstructing the cold air inlet and suction outlet?● Are stored items packed too tight?● Is the door open or is it opened and closed frequently?● Is the condenser clogged?
Excessive noise	<ul style="list-style-type: none">● Are all feet in firm contact with the floor?● Is the rear panel of the cooler contacting the wall or other objects?● Are other objects in contact with the cooler?
Condensation on cooler exterior	<ul style="list-style-type: none">● Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. wipe away condensation with a dry cloth.

Showcase sometimes stop running when thermostat turns off.

INSTRUCTION MANUAL

REQUIRED INFORMATION

- | | |
|--|---|
| ① Nature of malfunction
(as accurately as possible) | ④ Customer's name, address,
phone number |
| ② Product number | ⑤ Year and date of purchase |
| ③ Serial number | ⑥ Desired date for service visit |
- (incribed on badge)